## Operational Instructions

## Instructions

- 1. Ensure the metal braces are firmly clicked in place at each end to maintain structural support when the Henge is stationary or being moved.
- Ensure all castor breaks are in the up position for moving Henge and engaged in the down position when parked to prevent accidental movement.



